

Head Pump Priming Instructions:

Prime pump with water before testing or operating. Failure to do so will cause damage and will not be covered under warranty.

- 1) Remove the ¼" brass priming plug from supply end of pump. Fill with water until all air escapes and water remains at opening. Replace the plug.



- 2) Fill water in toilet bowl. Open the priming plug on discharge end of the pump. Bleed air out and replace the plug. Now the pump is ready for initial start.



Questions? Call Raz Marine

(954)525-5513 --- (800)824-1186